




INVICTA

INVINCIBLE IN DETAIL

SINCE 1837

WATER RESISTANCE

HOW IT WORKS AND WHAT YOU SHOULD KNOW.

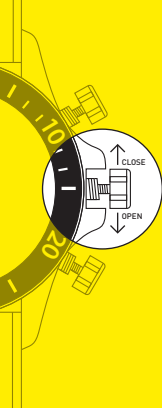

Many Invicta watches are equipped with a screw down crown including some chronograph watches. Meaning that both the crown and pushers are screw-type.

What does this mean?

When you adjust the time or date, it is the crown that you need to unscrew counter-clockwise in order to be able to set the watch. On a chronograph with screw down pushers, it is the pushers you have to unscrew in order to reset your watch or use the other functions.

When water damage occurs, most of the time it is because the wearer did not close the crown or in the case of a chronograph, the pusher and/or crown.

When properly closed, your timepiece will stand the test of water as the watch will be sealed and therefore protected. So please always remember to close those buttons and enjoy the full experience of the Invicta timepiece.