


Function : Hour, Minute & Second hands, Date

PRESENTATION

Display Elements

Minute Hand
Hour Hand
Second Hand
Date

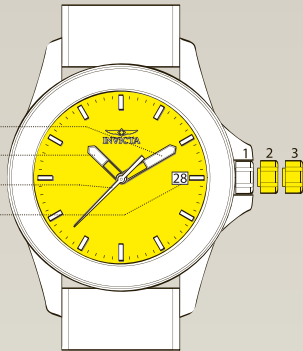

Control Buttons

Crown Positions:
1. Normal position
2. Setting of date
3. Setting of hour, minute, date

INSTRUCTIONS MANUAL NH35A

SETTINGS

Set the Time, Hour, Minute

- 1.1 Pull the crown to position 3.
- 1.2 Turn the crown clockwise to set hour/minute hands to the desired time.
- 1.3 Push the crown back to position 1.



Set of Date

- 2.1 Set the crown to position 2.
- 2.2 Turn the crown clockwise step-by-step to the desired date.
- 2.3 Push the crown back to position 1.

!! Attention !! Do not set the date between 9:00PM and 4:00A.M. As this will cause a malfunction.



INFO

To wind up the Mainspring

- Manual winding – Fully wound up by turning the crown minimum 55 times
– Fully wound up by turning the ratchet wheel screw 8 times

- Machine winding – Rotary speed: 30rpm
– Operation time: 60 minutes