

Function : Hour, Minute & Second, Date & Day

PRESENTATION

Display Elements

Minute Hand
Hour Hand
Second Hand
Day
Date



Control Buttons

Crown Positions:
1. Normal position
2. Setting of day / date
3. Setting of hour, minute, day

INSTRUCTIONS MANUAL NH36A

SETTINGS

Setting the Time

- 1.1 Pull the crown to position 3.
- 1.2 Turn the crown clockwise to set hour/minute hands to the desired time.
- 1.3 Push the crown back to position 1.



Setting the Day

- 2.1 Pull the crown to position 2.
- 2.2 Turn the crown clockwise to advance the day hand until the desired day is set.
- 2.3 Push the crown back to position 1.



Setting to Date

- 3.1 Set the crown to position 2.
 - 3.2 Turn the crown clockwise to set the date.
- !! Attention !! Do not set the date between 9:00PM and 4:00A.M. As this will cause a malfunction.



INFO

To wind up the Mainspring

- Manual winding – Fully wound up by turning the crown minimum 55 times
 – Fully wound up by turning the ratchet wheel screw 8 times
- Machine winding – Rotary speed: 30rpm
 – Operation time: 60 minutes