INVICTA Movement Caliber 5040.D

Display Elements Minute Hand -Center Stop-Second Second Hand Hour Hand Minute Counter 1/10 Second Counter -(Hour counter after 30 minutes) Date Window -

Movement Caliber : 5040D

Presentation

Control Buttons

- Push Button A Quick correction of month

Crown Positions:

 Normal position
Quick correction of date
Correction of hour, minute, day, date and second time zone / 24-hour

-Push Button B

Quick correction of second time zone / 24-hour

INFO Battery: 395

(diameter 9.5mm x 2.6mm / SR 927 SW) Accuracy: +20 / -10 seconds per month


Setting

Setting the Time

- Pull out the crown to position 3 (the watch stops).*
- 2 Turn the crown until you reach the correct time 8:45.
- Bush the crown back into position 1.*

Please note

- * In order to set the time to the exact second, must be pulled out when the second hand is in position «60».
- Once the hour and minute hands have been set, ③ must be pushed back into position 1 at the exact second.

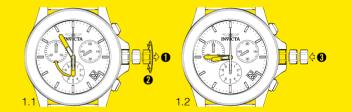

Setting

Setting the Date (Quick Mode)


• Pull out the crown to position 2 (the watch continues to run).

2 Turn the crown until the correct date 1 appears.

B Push the crown back into position 1.

Please note:

The date can be changed during the date changing phase between 8:30 PM and 12:00 PM; please note that the date must be set to the date of the following day as in this case, the automatic date changing does not occur at midnight.

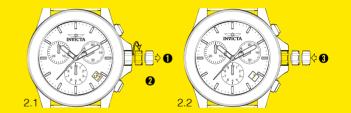

Setting

Setting the Date / Time

Example:

- Date / time on the watch: 17 / 1:25 AM
- Present date / time: 4 / 8:30 PM
- Pull out the crown to position 2 (the watch continues to run).
- Turn the crown until yesterdays date appears 3
- 3 Pull out the crown to position 3 (the watch stops).*
- Turn the crown until the correct date 4 appears.
- G Continue to turn the crown until the correct time 8:30 PM appears.**
- Push the crown back into position 1.

Please note:

- * To set your watch to the exact second, please refer to chapter titled "Setting the Time".
- ** Please observe the AM / PM clock rhythm.





Function

Chronograph: Basic Function (Start / Stop / Reset)

Example:

- Start: Press push button A.
- Stop: to stop the timing, press push button A once more and read the 3 chronograph counters: 4 min / 38 sek / 7/10 sec
- Sero positioning: Press push button B.

(The 3 chronograph hands will be reset to their zero position).



Function


Chronograph: Accumulated Timing

Example:

- 1 Start: (start timing)
- 2 Stop: (e.g. 15 min 5 sec following 1)
- **Bestart:** (timing is resumed)
- 🕙 Stop: (e.g. 13 min 5 sec following 3)
 - = 28 min 10 sec (The accumulated measured time is shown)*
- **③** Reset: The 3 chronograph hands are returned to their zero position.

Please note:

* Following (), the accumulation of the timing can be continued by pressing push button A (Restart / Stop, Restart / Stop, ...)

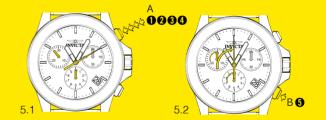

Function

Chronograph: Intermediate or Interval Timing

Example:

- 1 Start: (start timing)
- **2** Display interval: e.g. 10 minutes 10 seconds (timing continues in the background)
- Hereit Baking up the measured time:

(the 3 chronograph hands are quickly advanced to the ongoing measured time).

- O Stop: (Final time is displayed)
- **③** Reset: The 3 chronograph hands are returned to their zero position.

Please note:

* Following (), the accumulation of the timing can be continued by pressing push button A (Restart / Stop, Restart / Stop, ...)



Calibration

Adjusting the Chronograph Hands to Zero Position

Example:

One or several chronograph hands are not in their correct zero position and have to be adjusted (e.g. following a battery change).

• Pull out the crown to position 3

(all 3 chronograph hands are in their correct or incorrect zero position).

② Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the center stop-second rotates by 360° → corrective mode is activated).

Adjusting the center stop second \Rightarrow Single step A1 x short \Rightarrow Continuous A long \Rightarrow Adjusting the next hand B \Rightarrow Adjusting the 1/10 second counter hand (position 6h) \Rightarrow Single step A1 x short \Rightarrow Continuous A long \Rightarrow Adjusting the next hand B \Rightarrow Adjusting the minute counter (position 9h) \Rightarrow Single step A1 x short \Rightarrow Continuous A long

Seturning the crown to position 1. Termination of the chronograph hands adjustment can be carried out at any time.



